



Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
142401	1	1	Sprinkler body	140117	17	1	Nozzle lock ring	141941	41	1	Inversion spring
140102kit	02	1	Body support	142418	18	4	Main Nozzle	142442	42	2	Bearing
140102a	2a	4	Connector stud bolt	140114a	19	1	Packing for nozzle	140137a	43	2	Nut
140102b	2b	4	Nut	142420	20	2	Ball bearing	140329a	43a	2	Washer
142402d-kit	02d	1	Complete Spacer	142421	21	2	Ball bearing	142444	44	1	Reversing lever bar
142402e	2e	1	Screw	142422	22	1	Short spacer	140135kit	047	1	Return spring kit
140103kit	03	1	Brake ring	142423	23	1	Medium spacer	140135kit	47	1	Return form lever (047)
140103a	3a	1	Ball bearing crown	142424	24	1	Long spacer	140135kit	48	1	Return taper spring (047)
140125a	3b	1	O-ring	142425	25	2	Gasket for arm-shaft	142449	49	1	Screw
140104	4	1	Ferrule	142426	26	1	Gasket for inversion shaft	140137a	50	1	Nut
140117a	4a	1	Screw	142427	27	1	Gasket for inversion shaft	142452	52	2	Bearing
140104a	5	1	Central ring	142428kit	028	1	Pipe head	140153	53	1	Plug
140112a	6	1	O-ring	140115	28a	2	Screw	140154	54	1	Washer
140113a	7	1	O-ring	142428b	28b	2	Nut	140146	55	2	Screw
142408	8	1	U-packing	142429	29	1	Principal pipe	140115	56	2	Nut
140124a	9	1	Ball bearing ring	142429a	29a	1	O-ring	142457	57	2	Knob
140112	10	60	Sphere	142430	30	1	Washer	142458	58	8	Plate for counterweight
140111	11	1	Brake	142431	31	1	Fastener ring	142459	59	4	Screw
142412kit	012	1	Complete support arm	142432	32	2	Spacer for inversion shaft	140353a	60	4	Nut
142412	12	1	Support arm	142433kit	033	1	Complete support	142461	61	1	Arm stroke regulator
142412b	12b	2	Bush for support	142433	33	1	Arm support	142462	62	1	Arm spring
142413kit	013	1	Complete arm	142434	34	2	Screw	142463	63	1	Shaft for regulator
142413	13	1	Arm	140128a	35	2	Screw	142464	64	1	Shaft
142414	14	1	Arm shaft	142436kit	036	1	Complete lever	140163kit	071	1	Brake screw
142414a	14a	2	Locking nut	142436	36	1	Inversion lever	142473	73	1	Nut for brake
141915	15	1	Spoon	142437	37	1	Clamp for inversion lever	140164a	74	1	Brake spring
140363	15a	3	Screw	140363	38	1	Screw	140165	75	2	Pin
140137a	15b	3	Nut	140137	39	3	Screw	142476	76	1	Shaft for brake
142416	16	1	Lock Nut	140137a	40	3	Nut	142476a	76a	1	Nut

