
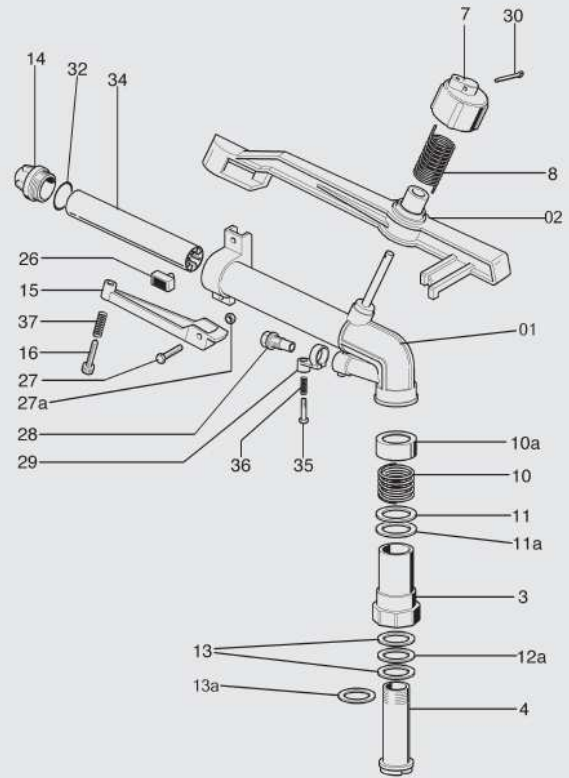


a settori

circolare

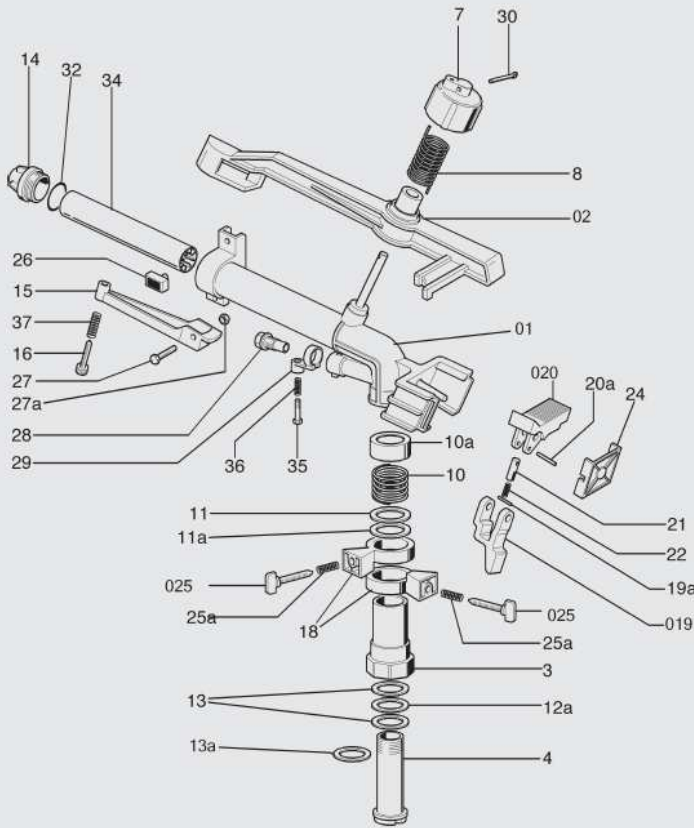

**Spare parts:** When ordering spare parts, please specify type of sprinkler and code number.

Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

| Code      | Fig No. | Qty | Description            | Code      | Fig No. | Qty | Description           | Code      | Fig No. | Qty | Description            |
|-----------|---------|-----|------------------------|-----------|---------|-----|-----------------------|-----------|---------|-----|------------------------|
|           |         |     | <b>PART CIRCLE</b>     | 142726    | 26      | 1   | Knob                  | 142715kit | 015     | 1   | Complete Jet Breaker   |
| 142801kit | 01      | 1   | Sprinkler Body         | 140137a   | 27      | 1   | Screw                 | 142715    | 15      | 1   | Jet Breaker            |
| 142702kit | 02      | 1   | Arm                    | 142727a   | 27a     | 1   | Nut                   | 141816    | 16      | 1   | Jet Breaker Screw      |
| 142702a   | 2a      | 1   | Bush                   | 142728    | 28      | 1   | Secondary Nozzle      | 142726    | 26      | 1   | Knob                   |
| 142703    | 3       | 1   | External Body          | 142729kit | 029     | 1   | Compleat Lock Ring    | 140137a   | 27      | 1   | Screw                  |
| 142704    | 4       | 1   | Internal Body          | 142729    | 29      | 1   | Secondary Jet Breaker | 142727a   | 27a     | 1   | Nut                    |
| 142706    | 6       | 1   | Spacer                 | 142730    | 30      | 1   | Cap Split Pin         | 142728    | 28      | 1   | Secondary Nozzle       |
| 142707    | 7       | 1   | Spring Cap             | 142734    | 34      | 1   | Water Rectifier       | 142729kit | 029     | 1   | Complete Secondary Jet |
| 142708    | 8       | 1   | Arm Spring             | 142735    | 35      | 1   | Jet Breaker Screw     | 142729    | 29      | 1   | Secondary Jet Breaker  |
| 142709    | 9       | 1   | Bush                   | 142736    | 36      | 1   | Spring                | 142730    | 30      | 1   | Cap Split Pin          |
| 142710    | 10      | 1   | Friction Spring        | 141837    | 37      | 1   | Jet Breaker Spring    | 142734    | 34      | 1   | Water Rectifier        |
| 142710a   | 10a     | 1   | Friction Spring Cover  | 142738    | 38      | 2   | Washer                | 142736    | 35      | 1   | Jet Breaker Screw      |
| 142711    | 11      | 1   | Vulk Washer            |           |         |     |                       | 142736    | 36      | 1   | Spring                 |
| 142711a   | 11a     | 1   | Teflon Washer          |           |         |     |                       | 141837    | 37      | 1   | Jet Breaker Spring     |
| 140318    | 12a     | 1   | Teflon Washer          |           |         |     |                       | 142738    | 38      | 2   | Washer                 |
| 142713    | 13      | 1   | Vulk Washer            | 142701kit | 01      | 1   | Sprinkler Body        |           |         |     |                        |
| 142713a   | 13a     | 1   | Rubber Washer          | 142702kit | 02      | 1   | Arm                   |           |         |     |                        |
| 142714    | 14      | 3   | Main Nozzle            | 142702a   | 2a      | 1   | Bush                  |           |         |     |                        |
| 142715kit | 015     | 1   | Complete Jetbreaker    | 142703    | 3       | 1   | External Body         |           |         |     |                        |
| 142715    | 15      | 1   | Jet Breaker            | 142704    | 4       | 1   | Internal Body         |           |         |     |                        |
| 141816    | 16      | 1   | Jet Breaker Screw      | 142706    | 6       | 1   | Spacer                |           |         |     |                        |
| 142818kit | 018     | 1   | Complete Ring          | 142707    | 7       | 1   | Spring Cap            |           |         |     |                        |
| 142818    | 18      | 2   | Stopper Ring           | 142708    | 8       | 1   | Arm Spring            |           |         |     |                        |
| 142819kit | 019     | 1   | Lever                  | 142709    | 9       | 1   | Bush                  |           |         |     |                        |
| 142819a   | 19a     | 1   | Pin For Lever          | 142710    | 10      | 1   | Friction Spring       |           |         |     |                        |
| 142820kit | 020     | 1   | Hook Lever             | 142710a   | 10a     | 1   | Friction Spring Cover |           |         |     |                        |
| 142820a   | 20a     | 1   | Pin For Lever          | 142711    | 11      | 1   | Vulk Washer           |           |         |     |                        |
| 142821    | 21      | 1   | Spring House           | 142711a   | 11a     | 1   | Teflon Washer         |           |         |     |                        |
| 140319a   | 22      | 1   | Inversion Spring       | 140318    | 12a     | 1   | Teflon Washer         |           |         |     |                        |
| 142824    | 24      | 1   | Inversion Lever Cover  | 142713    | 13      | 1   | Vulk Washer           |           |         |     |                        |
| 142825kit | 025     | 2   | Inversion Screw        | 142713a   | 13a     | 1   | Rubber Washer         |           |         |     |                        |
| 142825a   | 25a     | 2   | Inversion Screw Spring | 142714    | 14      | 3   | Main Nozzle           |           |         |     |                        |