



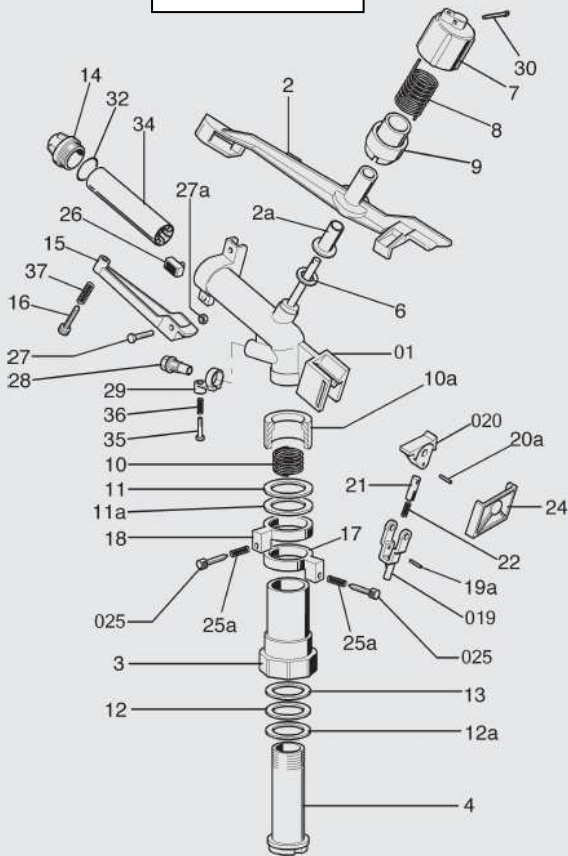

Part Circle

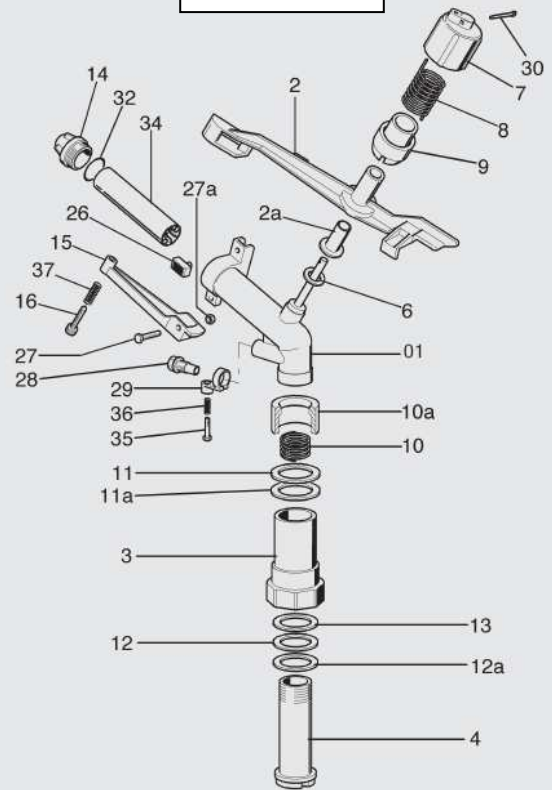

Full Circle



Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
			PART CIRCLE	141825a	25a	1	Spring	143114	14	3	Main Nozzle
143201kit	01	1	Complete Sprinkler Body	143126	26	1	Knob	143115kit	015	1	Complete Jet Breaker
143102kit	02	1	Complete Arm	143127	27	1	Screw	143115	15	1	Jet Breaker
143102a	2a	1	Arm Bearing	143127a	27a	1	Nut	141816	16	1	Jet Breaker Screw
143103	3	1	External Body	143128	28	1	Secondary Nozzle	143126	26	1	Knob
141804	4	1	Internal Body	143129kit	029	1	Complete Secondary Jet	143127	27	1	Screw
143106	6	1	Shaft Washer	143129	29	1	Secondary Jet-Breaker	143127a	27a	1	Nut
143107	7	1	Arm Spring Cap	143130	30	1	Cap Split Pin	143128	28	1	Secondary Nozzle
143108	8	1	Arm Spring	143132	32	1	O-Ring 3106	143129kit	029	1	Complete Secondary Jet
143109	9	1	Spring Support	143134	34	1	Water Rectifier	143129	29	1	Secondary Jet-Breaker
143110	10	1	Friction Spring	143135	35	1	Jet Breaker Screw	143130	30	1	Cap Split Pin
143110a	10a	1	Friction Spring Cover	143136	36	1	Spring	143132	32	1	O-Ring
141811	11	1	Friction Washer	141837	37	1	Jew BreakerSpring	143134	34	1	Water Rectifier
143111a	11a	1	Teflon Washer	143238	38	1	Washer	143135	35	1	Jet Breaker Screw
143112	12	1	Teflon Washer					143136	36	1	Spring
141812a	12a	1	Vulk Washer					141837	37	1	Jet Breaker Spring
141813	13	1	Rubber Washer	143101kit	01	1	Complete Sprinkler Body				
143114	14	3	Main Nozzle	143102kit	02	1	Complete Arm				
143115kit	015	1	Complete Jet Breaker	143102a	2a	1	Arm Bearing				
143115	15	1	Jet Breaker	143103	3	1	External Body				
141816	16	1	Jet Breaker Screw	141804	4	1	Internal Body				
141817	17	1	Inversion Stopper	143106	6	1	Shaft Washer				
143218kit	018	1	Complete Inversion Ring	143107	7	1	Arm Spring Cap				
141817	18	1	Inversion Stopper	143108	8	1	Arm Spring				
143219kit	019	1	Complete Primary Lever	143109	9	1	Spring Support				
143219a	19a	1	Pin For Lever	143110	10	1	Friction Spring				
143220kit	020	1	Complete Secondary Lever	143110a	10a	1	Friction Spring Cover				
143220a	20a	1	Pin For Lever	141811	11	1	Friction Washer				
143221	21	1	Spring House	141812	11a	1	Teflon Washer				
143222	22	1	Inversion Spring	143112	12	1	Teflon Washer				
143224	24	1	Inversion Lever Cover	141812a	12a	1	Vulk Washer				
143225kit	025	2	Inversion Screw	141813	13	1	Rubber Washer				