



Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
144401	1	1	Sprinkler Body	144428kit	028	1	Pipe-Head	144452	52	2	Bearing
144402kit	02	1	External Body	144428a	28a	2	Screw	140153	53	1	Plug
144403kit	03	1	Internal Body	144428b	28b	2	Nut	140154	54	1	Washer
144403b	3b	1	O-Ring	144429	29	1	Principal Pipe	140146	55	2	Screw
140368	4	1	Grease Nipple	144429a	29a	1	O-Ring	140371	56	2	Nut
144406	6	1	O-Ring	144430	30	1	Washer	144457	57	2	Knob
144408	8	1	U-Packing	144431	31	1	Fastener Ring	144458	58	4	Plate For Counterweight
140112	10	20	Sphere	144432	32	2	Spacer For Inversion Shaft	144458a	58a	4	Internal Plate
144410	11	1	Brake	144433kit	033	1	Complete Support	144459	59	4	Screw
144412kit	012	1	Complete Support Arm	144433	33	1	Arm Support	140128a	60	4	Nut
144412	12	1	Arm Support	144434	34	2	Screw	144461	61	1	Arm Stroke Regulator
144412b	12b	2	Bushing	140353a	35	2	Nut	144462	62	1	Arm Spring
144413kit	013	1	Complete Arm	144436kit	036	1	Complete Lever	144463	63	1	Shaft For Regulator
144413	13	1	Arm	144436	36	1	Inversion Lever	144464	64	1	Shaft
144414	14	1	Arm Shaft	144437	37	1	Clamp For Inversion Lever	144465	65	1	Variable Body
144414a	14a	2	Locking Nut	140363	38	1	Screw	144466kit	066	1	Complete Clamp
141915	15	1	Spoon	144439	39	3	Screw	144466	66	1	Clamp For Pipe
140363	15a	3	Screw	140137a	40	3	Nut	144467	67	2	Screw
140137a	15b	3	Nut	141941	41	1	Inversion Spring	144467a	67a	2	Nut
144416	16	1	Nut	144442	42	2	Bearing	144467b	67b	2	Washer
140117	17	1	Nozzle Locking Ring	144443	43	2	Nut	144152	68	2	Screw
144418	18	3	Main Nozzle	140329a	43a	2	Washer	144469	69	1	O-Ring
140114a	19	1	Packing For Nozzle	144444	44	1	Reversing Lever Bar	144470	70	4	Stud Bolt
144420	20	2	Ball Bearing	144445	45	1	Clamp Lever Inversion	140115a	70a	4	Nut
144421	21	2	Ball Bearing	140363	46	2	Screw	144470b	70b	4	Washer Grower
144422	22	1	Short Spacer	140135kit	047	1	Return spring kit	144471kit	071	1	Brake Screw
144423	23	1	Medium Spacer	140135kit	47	1	Return Fork Lever (047)	144473	73	1	Nut For Brake
144424	24	1	Long Spacer	140135kit	48	1	Return Tapered Spring (047)	144474	74	1	Brake Spring
144425	25	2	Gasket For Arm Shaft	140137	49	1	Screw	144475	75	2	Pin
144426	26	1	Gasket For Inversion Shaft	144450	50	1	Nut	144476	76	1	Brake Dowel Pin
144427	27	1	Gasket For Inversion Shaft	144451	51	1	Shaft For Clamp Lever	144480	80	2	Inversion Ring

