



Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
141701kit	01	1	Sprinkler Body	141719kit	019	1	Primary Inversion Lever	140115a	39a	1	Nut
141702kit	02	1	Complete Arm	141719a	19a	1	Inversion Lever Cover	141739b	39b	1	Inox Washer
141702	2	1	Arm	141719b	19b	4	Screw	141740	40	1	Screw
141703kit	03	1	External Body	141920kit	020	1	Secondary Lever	141741	41	1	Screw
141704kit	04	1	Internal Body	141720a	20a	1	Secondary Lever Pin	141742	42	1	Pulley
141706kit	06	1	Upper Arm Cover	141721	21	1	Spring House	141742a	42a	1	Bearing
141706a	6a	2	Upper Arm Cover	141722	22	1	Inversion Lever Spring	141743	43	1	Screw
141707	7	1	Arm Central Ring	141722a	22a	1	Bearing	141743a	43a	1	Inox Washer
141707a	7a	1	Elastic Pin	140324a	25	1	Screw	140137a	44	2	Nut
141708	8	1	Arm Lower Spring	141725a	25a	1	Brake Spring	140329a	45	4	Washer
141708a	8a	1	Arm Upper Spring	141725b	25b	1	Nut For Brake	140368	46	1	Grease Nipple
141709kit	09	2	Ball Bearing Ring	141726b	26b	1	Locking Nut	141747	47	1	Split Pin
141710kit	010	1	Arm Support Clamp	141726c	26c	1	Inox Washer	141748	48	1	Forked Strap
141711kit	011	1	Brake	141728a	028a	1	Complete Head Ring	141749kit	049	1	Counterweight
140112	12	24	Sphere	141728	28	1	Pipe Head	141750	50	2	Screw
141712a	12a	1	O-Ring	141728a	28a	1	Pipe Head Ring	141751	51	2	Screw
141713	13	1	U-Packing	141729	29	2	Screw	140371	52	4	Nut
141713a	13a	1	O-Ring	140371	29a	1	Nut	140374	53	1	Plug
141714	14	3	Main Nozzle	141730kit	030	1	Arm Lower Cover	140374a	54	1	Washer
140338	14a	1	Packing For Nozzle	141730a	30a	2	Screw	141755	55	2	Washer
141715akit	015a	1	Complete Jet Breaker Lever	141731	31	3	Ball Bearing	141757	57	1	Arm Boss
141715	15	1	Jet Breaker	141731a	31a	1	Fastener Ring	141758	58	1	Stud Bolt
141715a	15a	1	Jet Breaker Lever	141731b	31b	1	Ball Bearing	141758a	58a	1	Nut
141716kit	016	1	Secondary Jet Breaker	141732	32	2	O-Ring	141758b	58b	1	Washer
141716a	16a	1	Wing Nut	141733	33	1	Principal Pipe	141759	59	1	Arm Shock Absorber
141716b	16b	1	Jet Breaker Spring	141734	34	1	Packing for Cover	141761	61	1	Arrow Plate
140117	17	1	Nozzle Lock Ring	141735	35	1	Inversion Lever Shaft	141761a	61a	2	Nail
141717a	17a	1	Spacer For Arm Cover	141736	36	1	Spring For Bolt	141763	63	2	Washer
141718	18	2	Inversion Ring	141738	38	1	Screw	141764	64	1	Blind Nut
141718a	18a	1	Primary Lever Pin	141739	39	1	Screw	141765	65	1	O-Ring

