



Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
144501kit	01	1	Sprinkler Body	141719a	19a	1	Inversion Lever Cover	141740	40	1	Screw
144502kit	02	1	Complete Arm	141719b	19b	4	Screw	141741	41	1	Screw
141702	2	1	Arm	141720kit	020	1	Secondary Lever	141742	42	1	Pulley
141703kit	03	1	External Body	141720a	20a	1	Secondary Lever Pin	141742a	42a	1	Bearing
141704kit	04	1	Internal Body	141721	21	1	Spring House	141743	43	1	Screw
141706kit	06	1	Upper Arm Cover	141722	22	1	Inversion Lever Spring	141743a	43a	1	Inox Washer
141706a	6a	2	Screw	141722a	22a	1	Bearing	140137a	44	2	Nut
141707	7	1	Arm Central Ring	140324a	25	1	Screw	141745	45	4	Washer
141707a	7a	1	Elastic Pin	140164a	25a	1	Brake Spring	140368	46	1	Grease Nipple
141708	8	1	Arm Lower Spring	140164b	25b	1	Nut For Brake	141747	47	1	Split Pin
141708a	8a	1	Arm Upper Spring	141726b	26b	1	Locking Nut	141748	48	1	Forked Strap
44509kit	09	2	Ball Bearing Ring	141726c	26c	1	Inox Washer	141749kit	049	1	Counterweight
141710kit	010	1	Arm Support Clamp	141728akit	028a	1	Complete Ring	140115	50	2	Screw
141711kit	011	1	Brake	141728	28	1	Pipe Head	141751	51	2	Screw
140112	12	24	Sphere	141728akit	28a	1	Pipe Head Ring	141752	52	4	Nut
141712a	12a	1	O-Ring	141729	29	2	Screw	140153	53	1	Plug
141713	13	1	U-Packing	1401159a	29a	1	Nut	140154	54	1	Washer
141713a	13a	1	O-Ring	141730kit	030	1	Arm Lower Cover	141755	55	2	Washer
141714	14	3	Main Nozzle	141730a	30a	2	Screw	141757	57	1	Arm Boss
140114a	14a	1	Packing For Nozzle	141731	31	3	Ball Bearing	141758	58	1	Stud Bolt
141715akit	015a	1	Complete Jet Breaker Lever	141731a	31a	1	Fastener Ring	140115a	58a	1	Nut
141715	15	1	Jet Breaker	141731b	31b	1	Ball Bearing	141758b	58b	1	Washer
141715akit	15a	1	Jet Breaker Lever	141732	32	2	O-Ring	141759	59	1	Arm Shock Absorber
141716kit	016	1	Secondary Jet Breaker	141733	33	1	Principal Pipe	141761	61	1	Arrow Plate
141716a	16a	1	Wing Nut	141734	34	1	Packing for Cover	141761a	61a	2	Nail
141716b	16b	1	Jet Breaker Spring	141735	35	1	Inversion Lever Shaft	141763	63	2	Washer
141717	17	1	Nozzle Lock Ring	141736	36	1	Spring For Bolt	141764	64	1	Blind Nut
141717a	17a	1	Spacer For Arm Cover	141738	38	1	Screw	141765	65	1	O-Ring
141718	18	2	Inversion Ring	141739	39	1	Screw	141766 (kit)	066	1	Arm Wedge
141718a	18a	1	Primary Lever Pin	141739a	39a	1	Nut	141767kit	067	1	Complete Wedge Support
144519kit	019	1	Primary Inversion Lever	141739b	39b	1	Inox Washer	141767	67	1	Wedge Support

