



Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
144601	1	1	Sprinkler body	144618	18	3	Main Nozzle	140137a	43	2	Nut
140102kit	02	1	Body support	140114a	19	1	Packing for nozzle	140329a	43a	2	Washer
140102a	2a	4	Connector stud bolt	144620	20	2	Ball bearing	144644	44	1	Reversing lever bar
140102b	2b	4	Nut	144621	21	2	Ball bearing	140135kit	047	1	Return spring kit
144602dkit	02d	1	Complete spacer	144622	22	1	Short spacer	140135kit	47	1	Return Fork lever (047)
144602e	2e	1	Screw	144623	23	1	Medium spacer	140135kit	48	1	Return Tapered spring (047)
140103kit	03	1	Brake ring	144624	24	1	Long spacer	140137	49	1	Screw
140103a	3a	1	Ball bearing crown	144625	25	2	Gasket for arm-shaft	144650	50	1	Nut
140125a	3b	1	O-ring	144626	26	1	Gasket for inversion shaft	144652	52	2	Bearing
140104	4	1	Ferrule	144627	27	1	Gasket for inversion shaft	140153	53	1	Plug
140117a	4a	1	Screw	144628	28	1	Pipe head	140154	54	1	Washer
140104a	5	1	Central ring	140115	28a	2	Screw	140146	55	2	Screw
140112a	6	1	O-ring	144628b	28b	2	Nut	140371	56	2	Nut
140113a	7	1	O-ring	144629	29	1	Principal pipe	144657	57	2	Knob
144608	8	1	U-packing	144629a	29a	1	O-ring	144658	58	8	Plate for counterweight
144609	9	1	Ball bearing ring	144630	30	1	Washer	144659	59	4	Screw
140112	10	60	Sphere	144631	31	1	Fastener ring	140353a	60	4	Nut
144611	11	1	Brake	144632	32	2	Spacer for inversion shaft	144661	61	1	Arm stroke regulator
144612kit	012	1	Complete support arm	144633kit	033	1	Complete support	144662	62	1	Arm spring
144612	12	1	Support arm	144633	33	1	Arm support	144663	63	1	Shaft for regulator
144612b	12b	2	Bush for support	144634	34	2	Screw	144664	64	1	Shaft
144613kit	013	1	Complete arm	140353a	35	2	Screw	140163kit	071	1	Brake screw
144613	13	1	Arm	144636kit	036	1	Complete lever	140164	73	1	Nut for brake
144614	14	1	Arm shaft	144636	36	1	Inversion lever	140164a	74	1	Brake spring
144614a	14a	2	Locking nut	144637	37	1	Clamp for inversion lever	140165	75	2	Pin
141915	15	1	Spoon	140363	38	1	Screw	144676	76	1	Shaft for brake
140363	15a	3	Screw	144639	39	3	Screw	144676a	76a	1	Nut
140137a	15b	3	Nut	140137a	40	3	Nut	140171	76b	1	Washer
144616	16	1	Lock nut	141941	41	1	Inversion spring	144677	77	1	Packing
140117	17	1	Nozzle lock ring	144642	42	2	Bearing	144678	78	4	Nut

