



Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
145201kit	01	1	Sprinkler Body	145220kit	020	1	Secondary Lever	145240	40	1	Screw
145202kit	02	1	Complete Arm	145220a	20a	1	Secondary Lever Pin	145241	41	1	Screw
145202	2	1	Arm	145221	21	1	Spring House	145242	42	1	Pulley
145203kit	03	1	External Body	145222	22	1	Inversion Lever Spring	145242a	42a	1	Bearing
145204kit	04	1	Internal Body	145222a	22a	1	Bearing	145243	43	1	Screw
145206kit	06	1	Upper Arm Cover	140324a	25	1	Screw	145243a	43a	1	Inox Washer
145206a	6a	2	Screw	145225a	25a	1	Brake Spring	140137a	44	2	Nut
145207	7	1	Arm Central Ring	145225b	25b	1	Nut For Brake	140329a	45	4	Washer
145207a	7a	1	Elastic Pin	145226	26	1	Wedge	140368	46	1	Grease Nipple
145208	8	1	Arm Lower Spring	145226b	26b	1	Locking Nut	145247	47	1	Split Pin
145208a	8a	1	Arm Upper Spring	145226c	26c	1	Inox Washer	145249kit	049	1	Counterweight
145209kit	09	2	Ball Bearing Ring	145227kit	027	1	Complete Support	145250	50	2	Screw
145210kit	010	1	Arm Support Clamp	145227	27	1	Wedge Support	145251	51	2	Screw
145211kit	011	1	Brake	145228akit	028a	1	Complete Head Ring	140371	52	4	Nut
140112	12	18	Sphere	145228	28	1	Pipe Head	140374	53	1	Plug
145212a	12a	1	O-Ring	145228akit	28a	1	Pipe Head Ring	140374a	54	1	Washer
145213	13	1	U-Packing	145229	29	2	Screw	145255	55	2	Washer
145213a	13a	1	O-Ring	140371	29a	1	Nut	140356b	56	1	Nut
145214	14	3	Main Nozzle	145230kit	030	1	Arm Lower Cover	145257	57	1	Arm Boss
145214a	14a	1	Packing For Nozzle	145230a	30a	2	Screw	145258	58	1	Stud Bolt
145215akit	015a	1	Complete Jet Breaker Lever	145231	31	3	Ball Bearing	140371	58a	1	Nut
145215	15	1	Jet Breaker	145231a	31a	1	Fastener Ring	145258b	58b	1	Washer
145215akit	15a	1	Jet Breaker Lever	145231b	31b	1	Ball Bearing	145259	59	1	Arm Shock Absorber
145216kit	016	1	Secondary Jet Breaker	145232	32	2	O-Ring	145260	60	1	Guide Arrow
145216a	16a	1	Wing Nut	145233	33	1	Principal Pipe	145261	61	1	Arrow Plate
145216b	16b	1	Jet Breaker Spring	145234	34	1	Packing For Cover	145261a	61a	2	Nail
141437	17	1	Nozzle Lock Ring	145235	35	1	Inversion Lever Shaft	145262	62	1	Screw
145217a	17a	1	Spacer For Arm Cover	145236	36	1	Spring For Bolt	145262a	62a	1	Washer
145218	18	2	Inversion Ring	145237	37	1	Grub Screw	145263	63	2	Washer
145218a	18a	1	Primary Lever Pin	145238	38	1	Screw	145240	40	1	Screw
145219kit	019	1	Primary Inversion Lever	145239	39	1	Screw	145264	64	1	Blind Nut
145219a	19a	1	Inversion Lever Cover	140371	39a	1	Nut	145265	65	1	O-Ring
145219b	19b	4	Screw	145239b	39b	1	Inox Washer				