IB International Pty Ltd
PO Box 5481 Manly Qld 4179
Ph: 07 3348 8300 Fax: 07 3348 8900
Mob: 0408 379 619 Web: www.ibinternational.com.au

Royal

Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

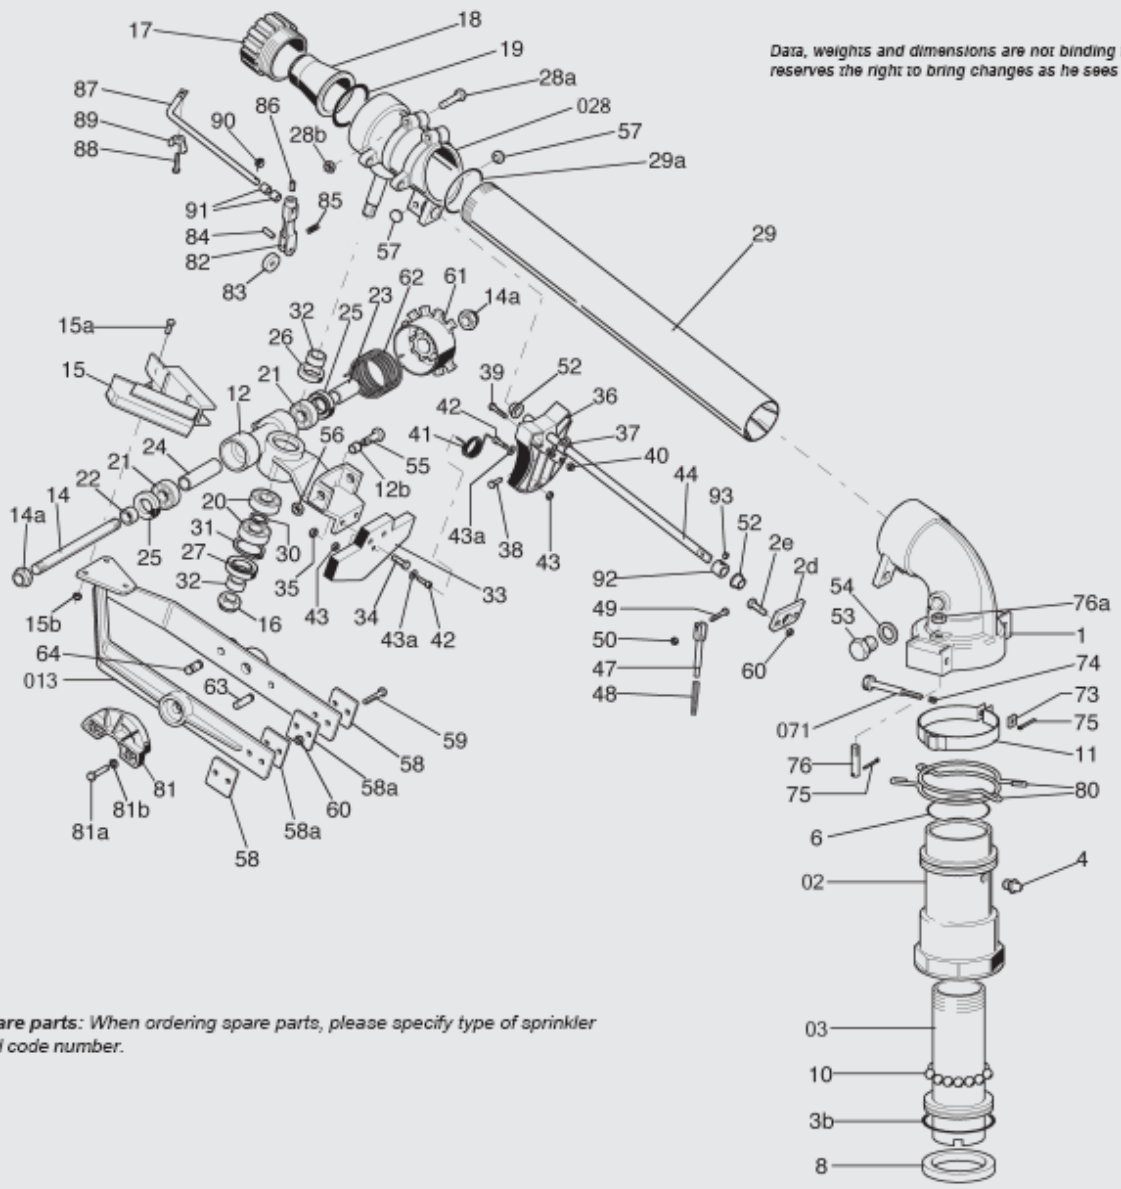

Spare parts: When ordering spare parts, please specify type of sprinkler and code number.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
144801	1	1	Sprinkler Body	144827	27	1	Gasket For Inversion Shaft	140126	55	2	Screw
144802kit	02	1	External Body	144828kit	028	1	Complete Pipe-Head	140115a	56	2	Nut
144802d-kit	02d	1	Complete Spacer	144828a	28a	2	Screw	144857	57	2	Knob
144702e	2e	1	Screw	144828b	28b	2	Nut	144858	58	2	Plate For Counterweight
144803kit	03	1	Internal Body	144829	29	1	Principal Pipe	144858a	58a	2	Internal Plate
144803b	3b	1	O–Ring	144829a	29a	1	O-Ring	144859	59	4	Screw
140368	4	1	Grease Nipple	144830	30	1	Washer	140128a	60	4	Nut
144806	6	1	O-Ring	144831	31	1	Fastener Ring	144861	61	1	Arm Stroke Regulator
144808	8	1	U-Packing	144832	32	2	Spacer For Inversion Shaft	144862	62	1	Arm Spring
140112	10	20	Sphere	144833kit	033	1	Complete Support	144863	63	1	Shaft For Regulator
144811	11	1	Brake	144833	33	1	Arm Support	144864	64	1	Shaft
144812kit	012		Complete Support Arm	144834	34	2	Screw	144871	071	1	Complete Brake Screw
144812	12	1	Arm Support	140353a	35	2	Nut	140164	73	1	Nut For Brake
144812b	12b	2	Bushing	144836kit	036	1	Complete Lever	140164a	74	1	Brake Spring
144813kit	013	1	Complete Arm	144836	36	1	Inversion Lever	140165	75	2	Pin
144813	13	1	Arm	144837	37	1	Clamp For Inversion Lever	144876	76	1	Brake Dowel Pin
144814	14	1	Arm Shaft	140363	38	1	Screw	144880	80	2	Inversion Ring
144814a	14a	2	Locking Nut	144839	39	3	Screw	144881	81	1	Cam
141915	15	1	Spoon	140137a	40	3	Nut	144881a	81a	2	Screw
140363	15a	3	Screw	141941	41	1	Inversion Spring	140353	81b	2	Washer Grower
140137a	15b	3	Nut	144842	42	2	Bearing	144882kit	082	1	Jet Breaker Lever
144816	16	1	Nut	140137a	43	2	Nut	144883	83	1	Pulley
140117	17	1	Nozzle Locking Ring	140329a	43a	2	Washer	144884	84	1	Elastic Pin
144818	18	3	Main Nozzle	144844	44	1	Reversing Lever Bar	144885	85	1	Jet Breaker Spring
140114a	19	1	Packing For Nozzle	140135kit	047	1	Return spring kit	144886	86	1	Screw
144820	20	2	Ball Bearing	140135kit	47	1	Return Fork Lever (047)	144887	87	1	Jet Breaker Bar
144821	21	2	Ball Bearing	140135kit	48	1	Return Tapered Spring (047)	144888	88	1	Screw
144822	22	1	Short Spacer	144849	49	1	Screw	144889	89	1	Wing Nut
144823	23	1	Medium Spacer	144850	50	1	Nut	144890	90	1	Split Pin
144824	24	1	Long Spacer	144852	52	2	Bearing	144891	91	2	Bearing
144825	25	2	Gasket For Arm Shaft	140374	53	1	Plug	144892	92	1	Bush
144826	26	1	Gasket For Inversion Shaft	140374a	54	1	Washer	144893	93	1	Grub Screw