IB International Pty Ltd
PO Box 5481 Manly Qld 4179
Ph: 07 3348 8300 Fax: 07 3348 8900
Mob: 0408 379 619 Web: www.ibinternational.com.au

Spring

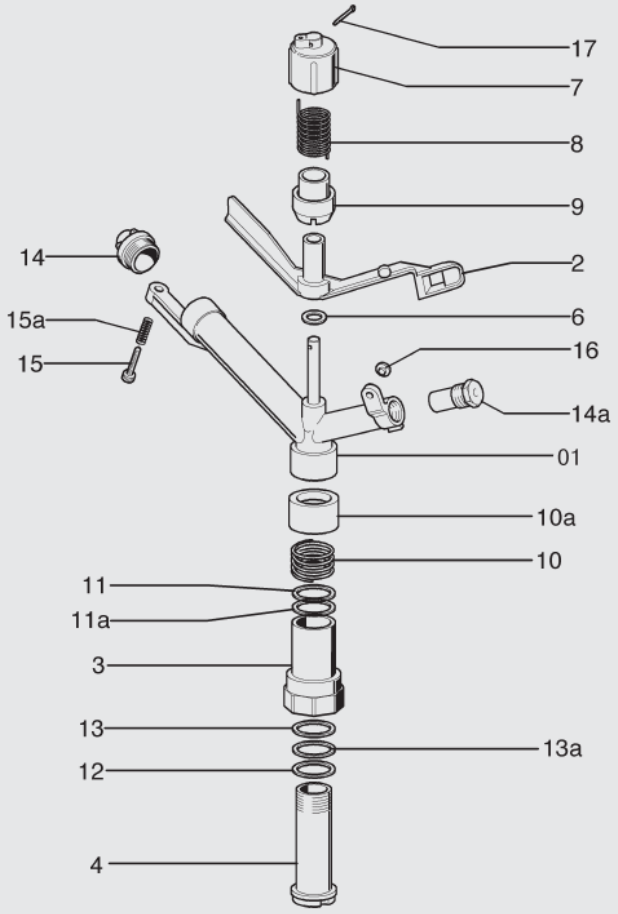

Spare parts: *When ordering spare parts, please specify type of sprinkler and code number.*

Data, weights and dimensions are not binding for the manufacturer, who reserves the right to bring changes as he sees fit.

Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description	Code	Fig No.	Qty	Description
145101kit	01	1	Complete Sprinkler Body								
145102	2	1	Arm								
145103	3	1	External Body								
145104	4	1	Internal Body								
145106	6	1	Shaft Washer								
145107	7	1	Arm Spring Cap								
145108	8	1	Arm Spring								
14509	9	1	Spring Support								
141510	10	1	Friction Spring								
141510a	10a	1	Friction Cap								
141511	11	1	Rubber Washer								
142512	11a	1	Teflon Washer								
141512	12	1	Vulk Washer								
141513	13	1	Rubber Washer								
142512	13a	1	Washer								
141514	14	2	Main Nozzle								
141514a	14a	1	Secondary Nozzle								
141515	15	1	Jet Breaker Screw								
141837	15a	1	Spring								
141516	16	1	Knob								
141517	17	1	Cap Split Pin								
141518	18	1	Wedge								
141519	19	1	Screw								
141520	20	1	Washer								
140137a	21	1	Nut								
141522	22	1	Water Rectifier								